 


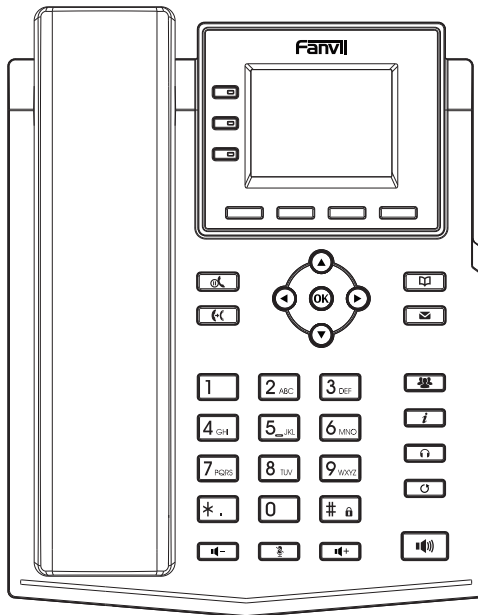

X303 -2 Wire

Quick Installation Guide

English

Precautions

 
Warning: Please do not power cycle the device during system boot up or firmware upgrade. You may corrupt firmware images and cause the unit to malfunction.

Warning: Use only the power adapter included in the device package. Using an alternative non-qualified power adapter may possibly damage the unit.


Overview

X303-2 Wire phone is an upgrade from the existing IP phones in terms of power and network supply, adopting a 2-Wire connection. It features high-definition voice, rapid deployment, a 2.4-inch color main screen, four SIP accounts, and supports 2-Wire power and network supply, multi-party conference calls, among other rich functions. It also offers expansion capabilities such as connectivity to EHS wireless headsets. This 2-Wire IP phone can meet various application scenarios and provide a high-quality user experience.

Packaging list

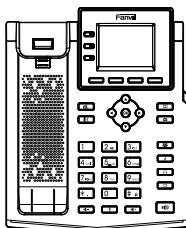

X303-2 Wire

 

Handset



Handset Cord



Stand



 
2-Wire Cord



Quick Installation Guide




Power Adapter
(Optional)



Wall Stand
(Buy separately)

 
Keys description

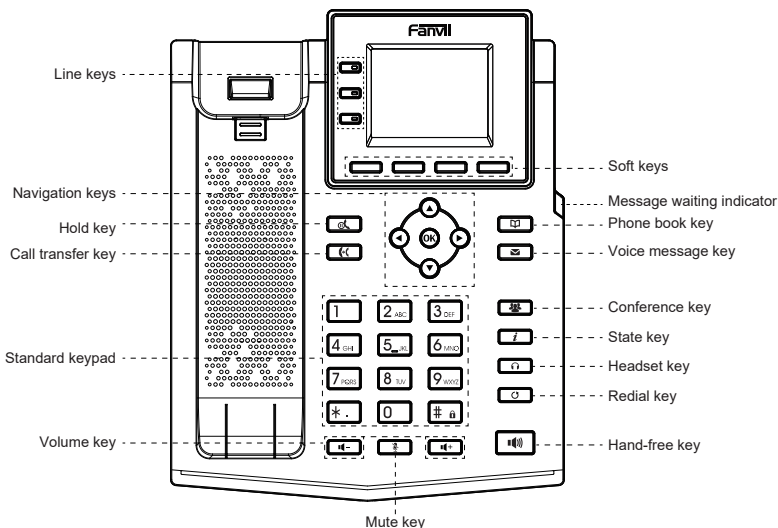


Device Installation

Please follow the instructions in below picture to install the device.

 • Bracket desktop installation

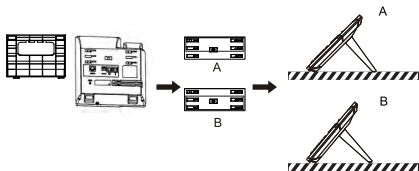

 
• Wall mounting (wall stand need buy separately)

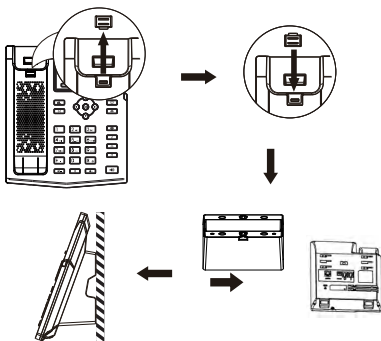

• Connecting to the device

Please connect power adapter, 2-wire, handset, and headset to the corresponding ports as described in below picture.

 - ① 2-Wire port: connecting the 2-Wire interface
- ② Power port: connect the power adapter
- ③ Headset port: connect headset.
- ④ Handset port: connect IP Phone handset

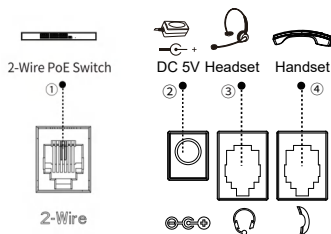

Note: You can contact your service provider for additional settings that may be necessary to configure the phone, or download the user manual and FAQ for more detailed information.

Network connect

Powered and networked through 2-wire

1. Turn on the power of the 2-Wire POE switch, and connect the phone's 2-Wire interface to the 2-Wire POE switch using a 2-wire cord.
2. The default is DHCP mode.

Phone configuration

Configuration via LCD menu of phone

1. Press Menu > System (default password 123)
2. Select Network: To configure the Network Settings (IPv4/IPv6/IPv4&IPv6) ;
3. Select Accounts: To configure enable the account, fill the SIP server address, port, user name, password etc ;
4. Save the configuration.

Configuration via web

1. Get the IP address from the phone: Press the (V) key>Network, to get IP ;
2. Login: Input the IP address in the web browser. The PC and phone should be in the same IP address segment (The default username and password are both 'admin') ;
3. Configure: Select network/account etc, and fill the relevant content ;
4. Save the configuration.

Language setting

1. Press Menu key > Basic > Language.
2. Select the desired language and press OK soft key.

Making a call

1. **Pre-dialing:** enter the phone number and pick up the handset.
2. **Direct dialing:** lift the handset and enter the phone number.
3. **Handsfree:** enter phone number and press or vice versa.
4. **Headset:** enter phone number and press or vice versa.
5. **Designated line:** press line key, enter phone number and press dial key.

Accepting a call

1. **Using the handset:** pick up the handset.
2. **Using the headset:** press .
3. **Using the handsfree:** press .

Redial

1. Press key, redial a call number.



Fanvil Technology Co., Ltd

Website: www.fanvil.com

EMail: sales@fanvil.com support@fanvil.com

Tel: +86-755-2640-2199 Fax: +86-755-2640-2618

Add: 10/F Block A, Dualshine Global Science Innovation Center, Honglang North 2nd Road, Bao'an District, Shenzhen, China